



www.MLMEBLE.pl

GB

D

CZ

SK


RUS

LT

assembly instructions / montageanleitung / montážní návod / montážny návod / инструкции по монтажу / surinkimo instrukcija










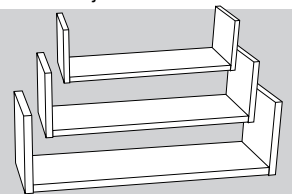INSTRUKCJA MONTAŻU




PÓŁKI U new


↑ 18 → 100/80/60 ↗ 18

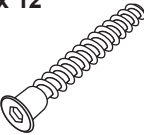


akcesoria / accessories / zubehör / příslušenství / prislušenstvo / аксессуары / furnitūra :

<p>x 12</p>  <p>KT 6,3/60</p>	<p>x 12</p>  <p>ZAK</p>	<p>x 1</p>  <p>kluczyk / key / schlüssel / klíč / кľуч / ключ</p>	<p>x 3</p>  <p>WT 3,5x16</p>	<p>x 12</p>  <p>WT 3x16</p>	<p>x 3</p>  <p>PK 25</p>	<p>x 6</p>  <p>ZM 13x60</p>
--	--	--	---	--	---	--

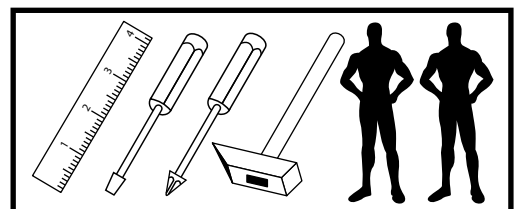do montażu potrzebne są:
are needed for assembly:
sind erforderlich für die montage:
jsou potřebné pro montáž:
sú potrebné pre montáž:
которые необходимы для сборки:
Surinkimui reikės

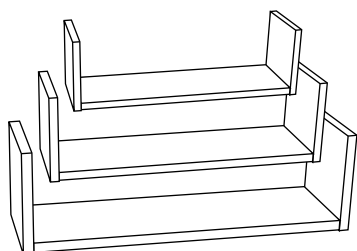



	CODE			
1	POLKAU NEW_01	960	176	1
2	POLKAU NEW_02	760	176	1
3	POLKAU NEW_03	560	176	1
4	POLKAU NEW_04	183	176	6
5				

